



## USER'S HANDBOOK

Connect the portable antenna to the beacon by screwing it into its connector ANT (11).

Place the beacon switch (9) in the ON position.

The indicator light (10) and the aural indicator indicate beacon activation. The actual distress signal will be transmitted after 150 s. This state will be displayed by flashing on indicator light : 1 s ON, 1.5 s OFF.

Place the beacon upright in an obstacle-free area. If on a lake or at sea, attach the beacon to the liferaft by means of the lanyard (5) and allow it float.

### C. Beacon shutdown

In the event of a false maneuver or untimely operation, carry out the shutdown of the beacon

The beacon is shutdown by pressing the RESET/TEST pushbutton on the remote control unit, or by switching the beacon's AUTO/OFF/ON toggle switch (9) to OFF (pull and slide to OFF).

NOTE : Stopping distress signal transmission by means of the remote control unit does not switch the beacon OFF. It is restored in AUTO mode (ARMED).

**CAUTION : THE BEACON MUST BE COMPLETELY SHUTDOWN BEFORE ANY MAINTENANCE OPERATIONS ARE PERFORMED. THE BEACON MUST BE COMPLETELY SHUTDOWN BEFORE IT IS REMOVED FROM ITS BRACKET AND IT'S AUTO/OFF/ON TOGGLE SWITCH IN OFF POSITION.**

### D. Beacon self-test

The ELT A06 is designed to perform a self-test, from the remote control unit, or as soon as the beacon is started up (manually or automatically).

#### (1) Self-test on the beacon

Place the beacon's AUTO/OFF/ON toggle switch (9) in ON position.

Check that the indicator light (10) comes ON and the beacon's buzzer sounds, after a short blink for more than 10 s.

Return the switch (9) to AUTO position.



## USER'S HANDBOOK

### (2) Self-test by means of the remote control unit

The beacon's AUTO/OFF/ON toggle switch (9) must be in AUTO position.

The Remote Control ARMED/ON must be in ARMED position.

Press the RESET/TEST pushbutton for approx. 2 s then check that the ELT ON indicator light comes ON, after one short blink more than 10 s (same display on the Remote Control Led).

Release the RESET/TEST pushbutton.

In all other cases the self-test is said failed and a maintenance operation should be conducted on ELT and/or Remote Control and/or wiring.