

| <b>ELT model</b>    | <b>Test Bench model</b>        | <b>CMM</b> | <b>Remarks</b>                               |
|---------------------|--------------------------------|------------|--|
| A06/A06V1           | BTS 96 series                  | 25-60-01   | Note : STB-06 may be used (see SIL 07B63005) |
| A06T                | BTS 96 series                  | 25-60-05   | Note : STB-06 may be used (see SIL 07B63005) |
| A06V2               | BTS 96 series or STB-06 series | 25-60-04   |  |
| S06                 | BTS 96 series or STB-06 series | 25-60-03   |  |
| ADT 406 AF/AP or AP | STB-06 series                  | 25-60-10   |  |
| ADT 406 S           | STB-06 series                  | 25-60-11   | From Software release V.1.2.7.0              |